

Force Sensor (Blue/White) Cable Replacement for 086M92 Hammer

- Open hammer



- Loosen the ½" nut on the blue cable BNC connector inside the hammer



- Cut cable tie holding blue cable to hammer.



- Remove cable from hammer shaft while turning whole cable and remove cable from hammer box



-Run hammer shaft end of new cable into box. Slide washer and nut onto cable.



-Tighten cable to hammer shaft. Hand tighten cable to hammer shaft.

Note: TURN WHOLE CABLE WHILE TIGHTING CABLE TO SHAFT. DO NOT KINK OR BIND CABLE IT IS VERY SENSITIVE



- Tighten nut on BNC connector.



- Route new cable the same way the old cable was routed.

Note: DO NOT KINK OR BIND CABLE.



- Replace cable tie



- Close hammer